

Art. **N30033**

CITROËN JUMPER

04/06→

FIAT DUCATO

07/06→

OPEL MOVANO


01/22→

PEUGEOT BOXER


04/06→



H1
(L1, L2, L3)





H2
(L2, L3, L4)



H3
(L3, L4)



KIT x6

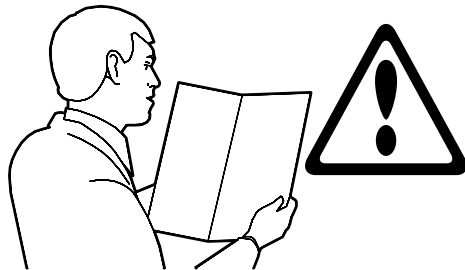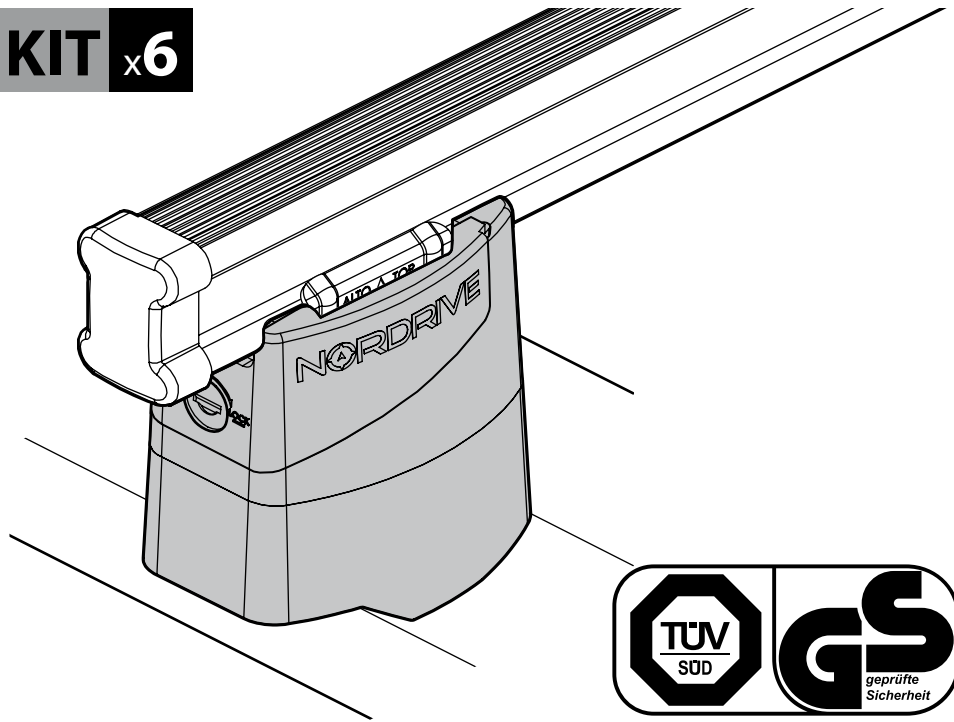

- ① ADATTO PER
② SUITABLE FOR
③ INDIQUÉ POUR
④ GEEIGNET FÜR
⑤ ADECUADA PARA

NORDRIVE
KARGO SERIES

- ① ISTRUZIONI DI MONTAGGIO
② FITTING INSTRUCTIONS
③ MONTAGEANLEITUNG
④ INSTRUCTIONS DE MONTAGE
⑤ ISTRUCCIONES DE MONTAJE
⑥ INSTRUÇÕES DE MONTAGEM
⑦ MONTAGE-INSTRUCTIES
⑧ MONTERINGSANVISNING
⑨ ASENNUSOHJE
⑩ PAIGALDUSJUHEND
⑪ STIPRINĀŠANAS INSTRUKCIJA
⑫ PRITVIRTINIMO INSTRUKCIJOS
⑬ INSTRUKCJA MONTAŻU
⑭ Инструкции по установке
⑮ NÁVOD NA MONTÁŽ
⑯ NÁVOD NA MONTÁŽ
⑰ NAVODILA ZA PRITRJEVANJE
⑱ UPUTA ZA SASTAVLJANJE
⑲ A FELSZERELÉS MÓDJA
⑳ Οδηγίες συναρμολόγησης
㉑ MONTAJ TALIMATLARL
㉒ ИНСТРУКЦИИ ЗА МОНТАЖ
㉓ UPUTSTVA ZA MONTAŽU


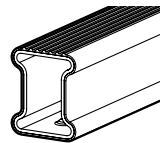


Kargo
ACCIAIO
Steel

- ① BARRE KARGO
② KARGO BARS
③ BARRES KARGO
④ DACH-LASTENTRÄGER
KARGO
⑤ BARRES KARGO

180cm

Art. **N10015** x3

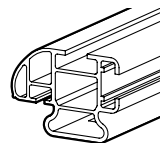


Kargo-Plus
ALLUMINIO
Aluminium

- ① BARRE KARGO-PLUS
② KARGO-PLUS BARS
③ BARRES KARGO-PLUS
④ DACH-LASTENTRÄGER
KARGO-PLUS
⑤ BARRES KARGO-PLUS


180cm

Art. **N10045** x3

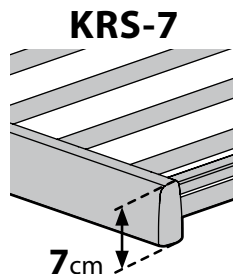

KRS-7

7cm

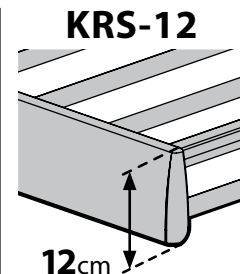


KRS-12

12cm

- ① CESTE PORTATUTTO
KRS-7 / KRS-12
② KRS-7 / KRS-12
VAN ROOF RACKS
③ GALERIE
KRS-7 / KRS-12
④ DACHKÖRBEIN
KRS-7 / KRS-12
⑤ BACAS
KRS-7 / KRS-12

NORDRIVE[®]








TRANSPORT SOLUTIONS










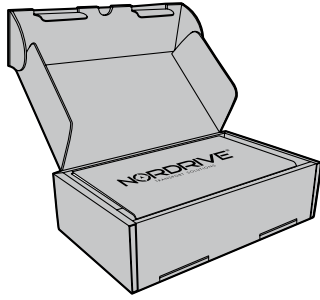



NORDDRIVE®

TRANSPORT SOLUTIONS

Art. **N30033**

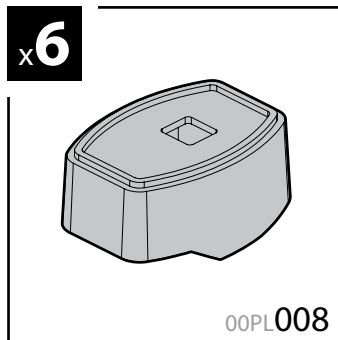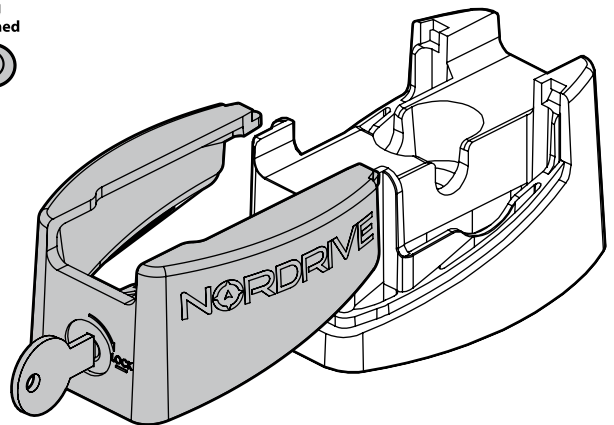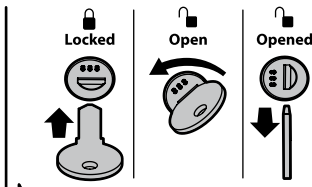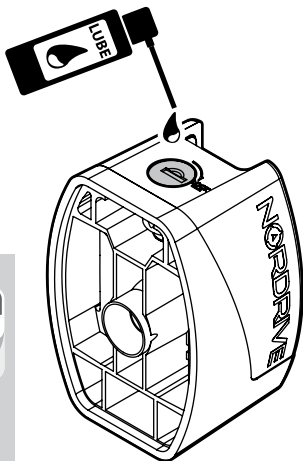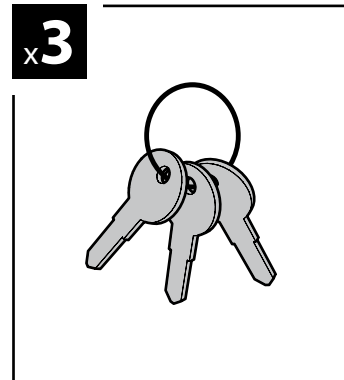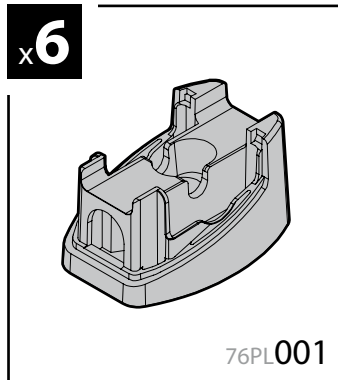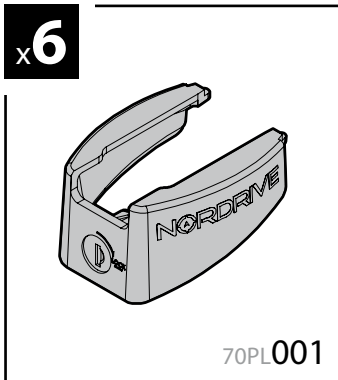

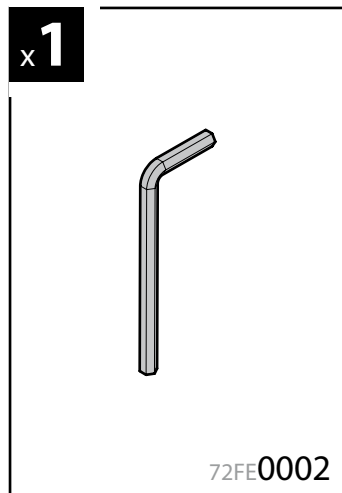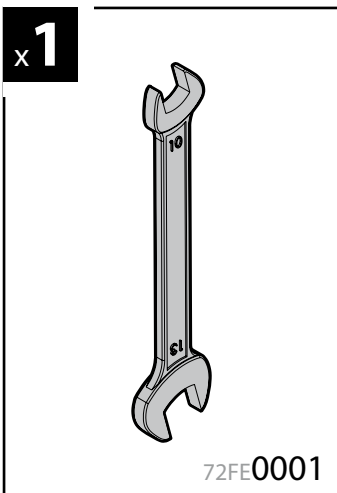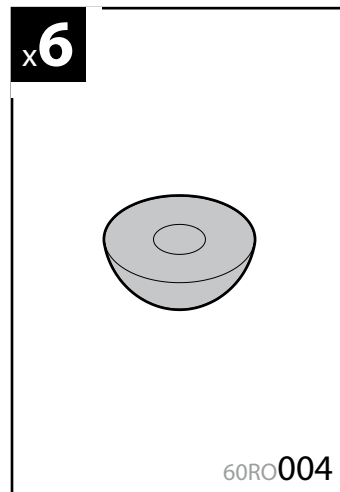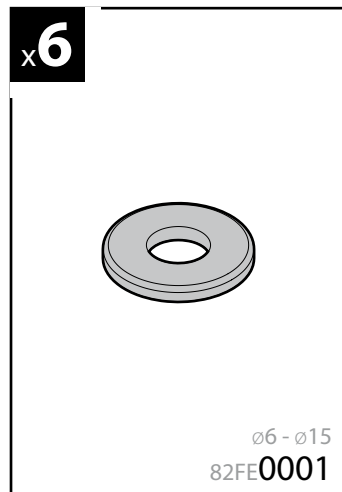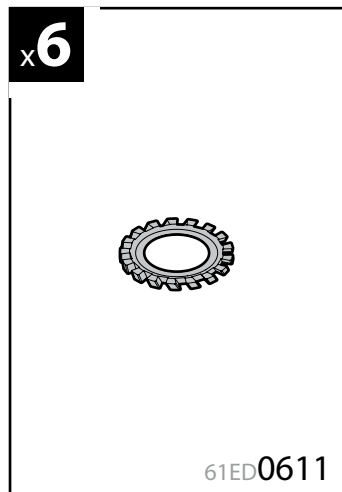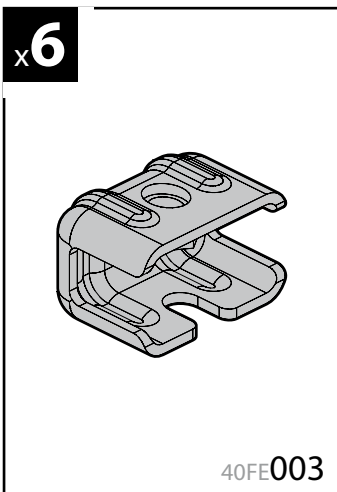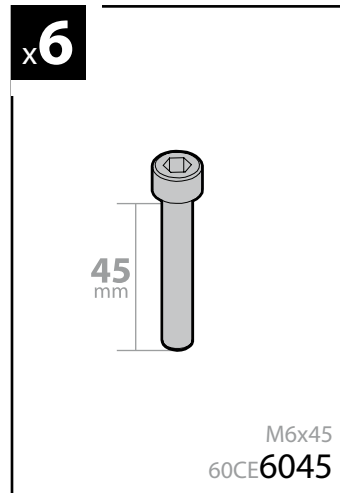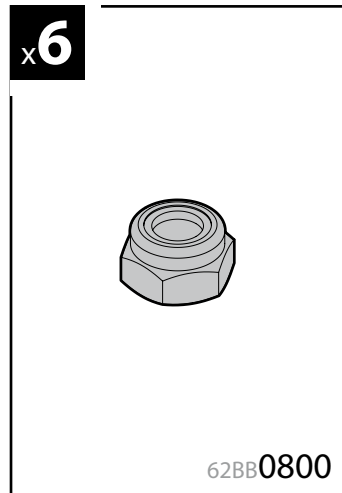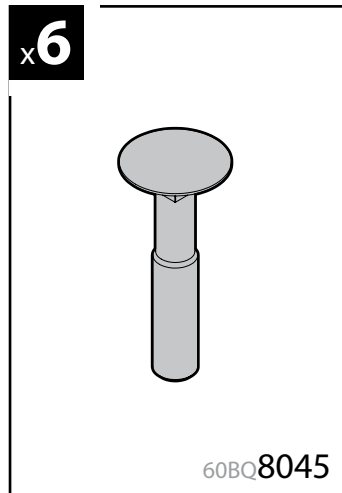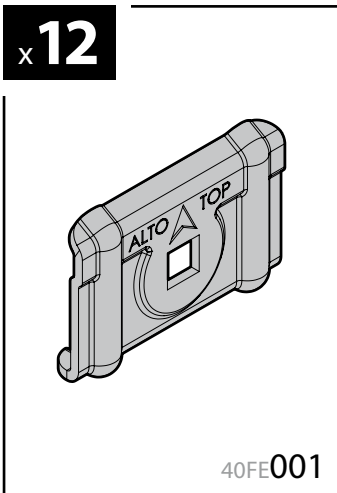

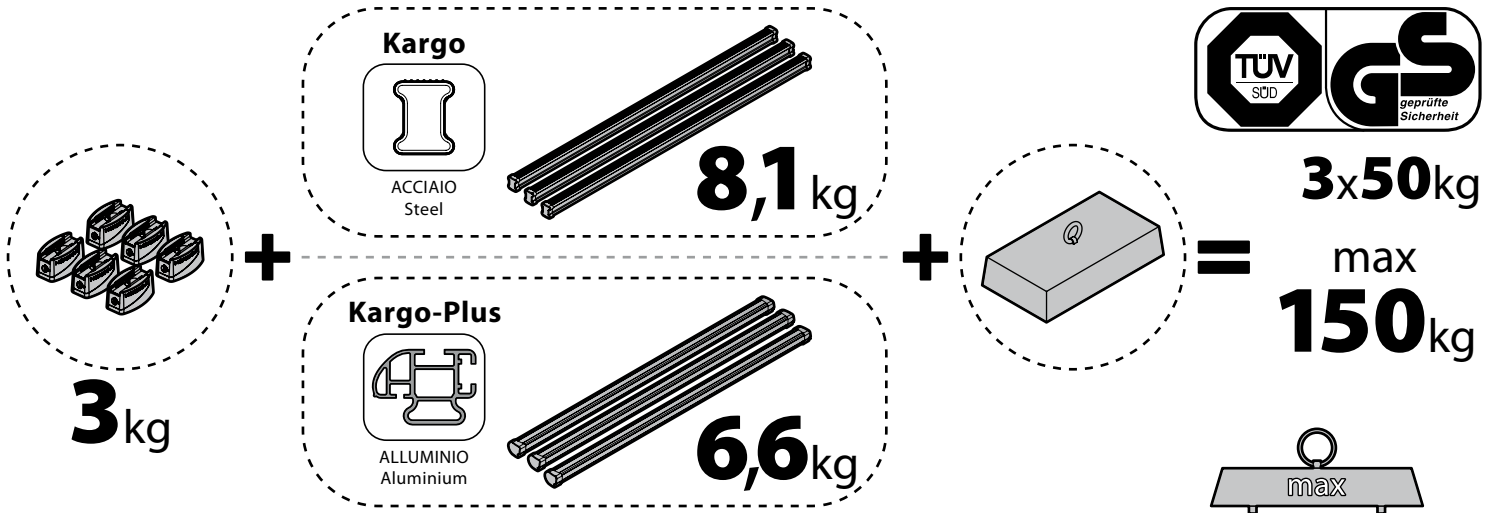


! SAFETY REGULATIONS

SAFETY REGULATIONS

LE NORME DI SICUREZZA

Safety regulations

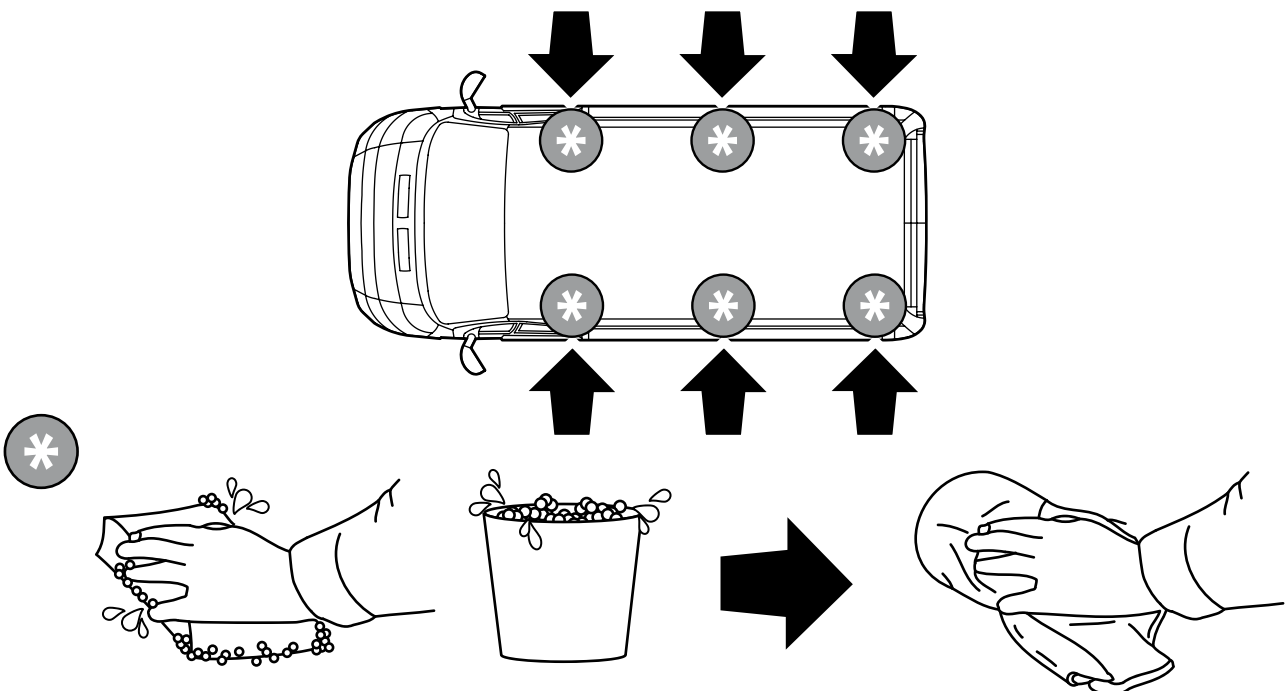


ⓘ ISTRUZIONI DI MONTAGGIO
ⓖᔡ FITTING INSTRUCTIONS
ⓓ MONTAGEANLEITUNG
ⓕ INSTRUCTIONS DE MONTAGE
ⓔ ISTRUCCIONES DE MONTAJE
ⓖ ⓘ INSTRUÇÕES DE MONTAGEM
ⓓ ⓘ MONTAGE-INSTRUCTIES
ⓖ ⓘ MONTERINGSANVISNING

ⓕ ⓘ ASENNUSOHJE
ⓔ ⓘ PAIGALDUSJUHEND
ⓕ ⓘ STIPRINĀŠANAS INSTRUKCIJA
ⓕ ⓘ PRITVIRTINIMO INSTRUKCIJOS
ⓕ ⓘ INSTRUKCJA MONTAŻU
ⓕ ⓘ Инструкции по установке
ⓕ ⓘ NÁVOD NA MONTÁŽ
ⓕ ⓘ NÁVOD NA MONTÁŽ


ⓕ ⓘ NAVODILA ZA PRITRJEVANJE
ⓕ ⓘ UPUTA ZA SASTAVLJANJE
ⓕ ⓘ A FELSZERELÉS MÓDJA
ⓕ ⓘ Οδηγίες συναρμολόγησης
ⓕ ⓘ MONTAJ TALIMATLARL
ⓕ ⓘ ИНСТРУКЦИИ ЗА МОНТАЖ
ⓕ ⓘ UPUTSTVA ZA MONTAŽU

1





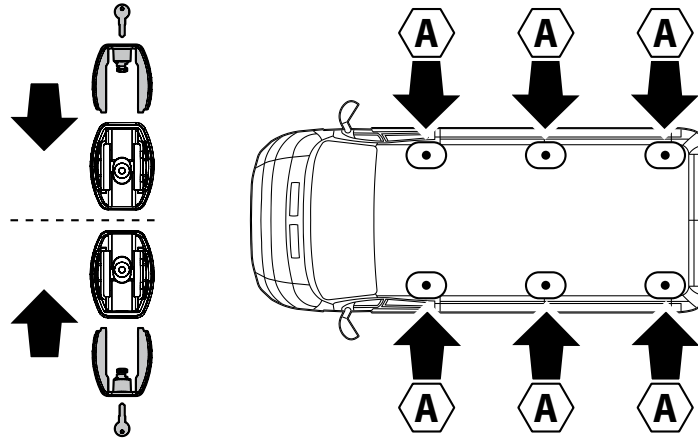


2




A

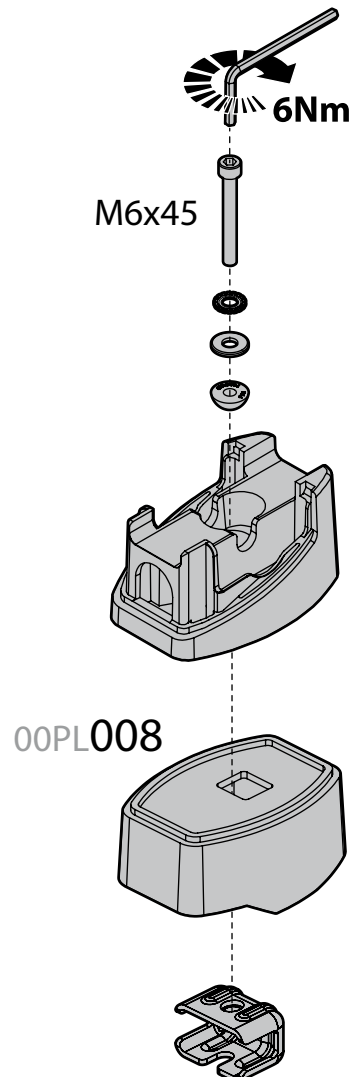

3

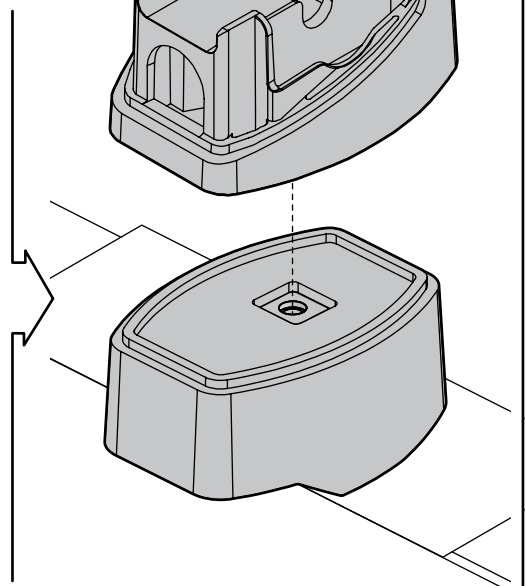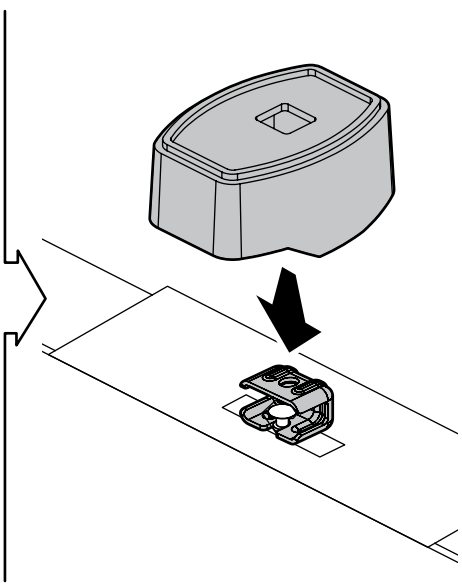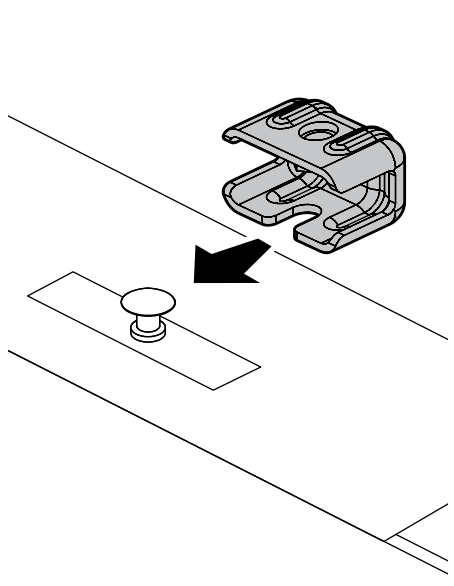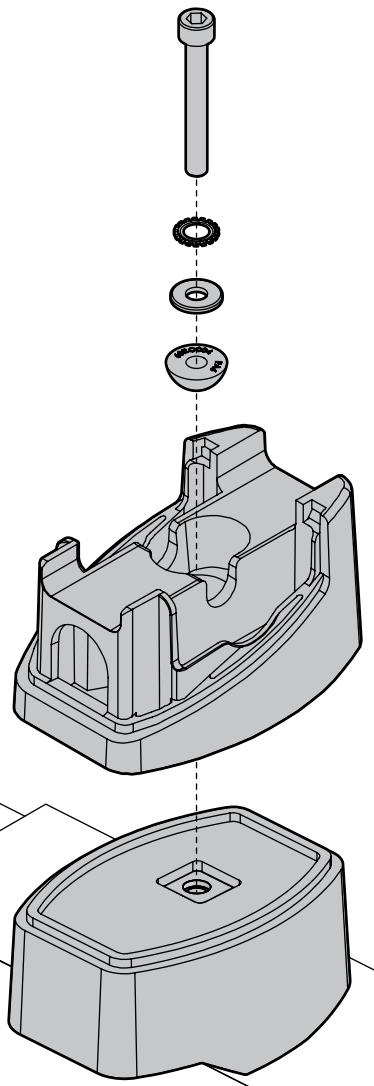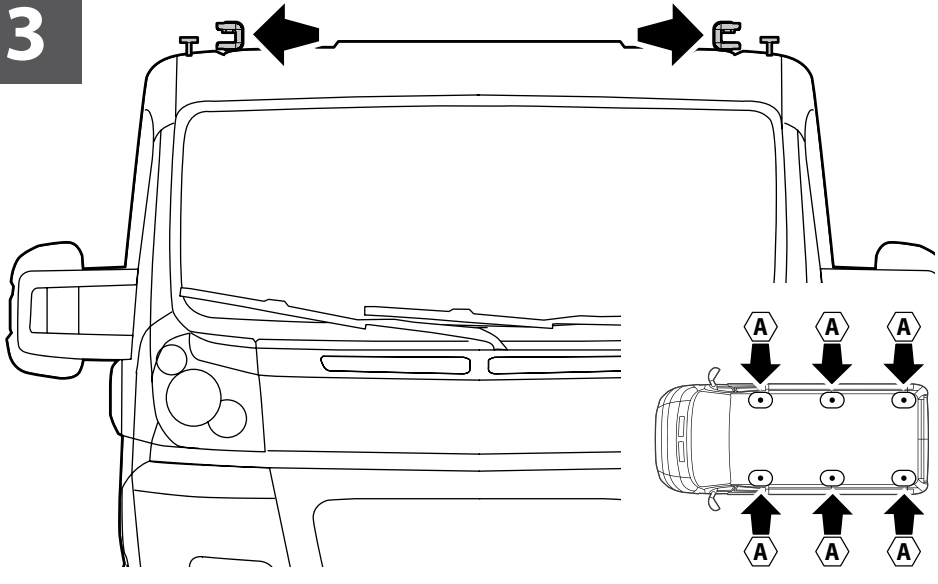

4

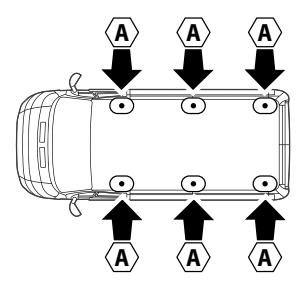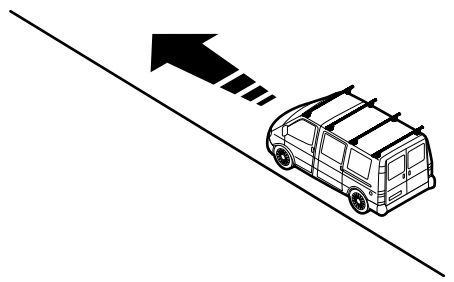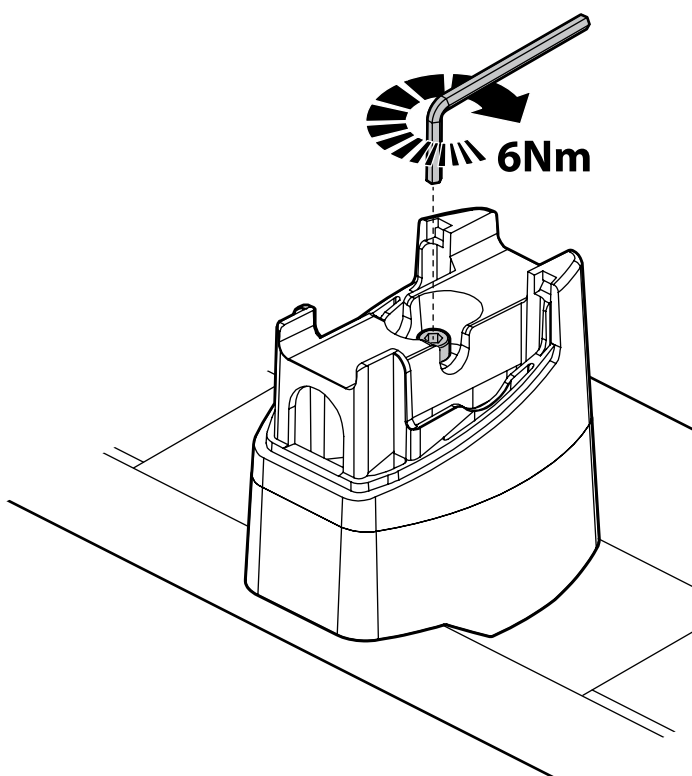




ATTENZIONE WARNING



A Kargo

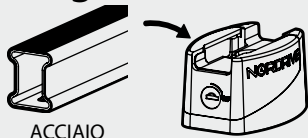


ACCIAIO
Steel

MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE

A



















B Kargo-Plus

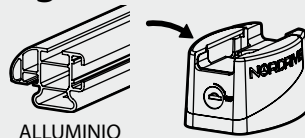

ALLUMINIO
Aluminium


MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE

B

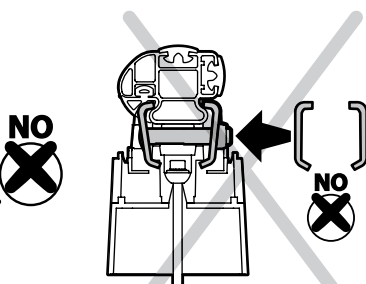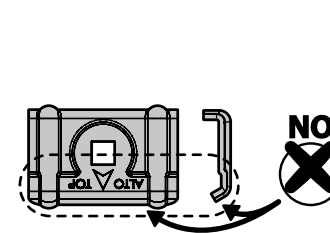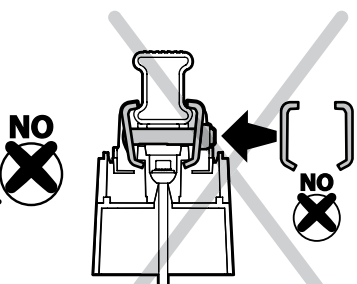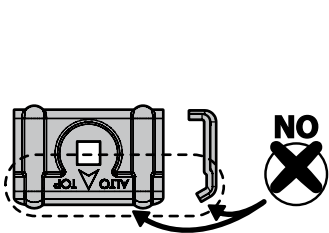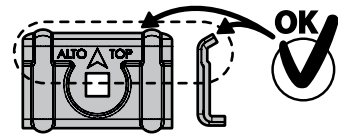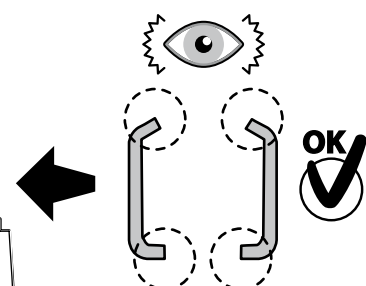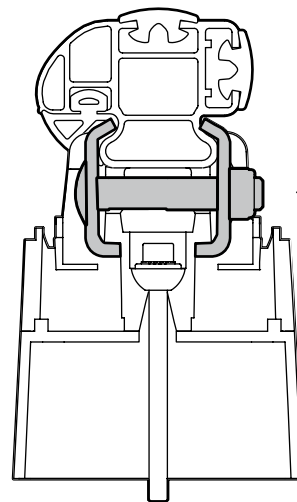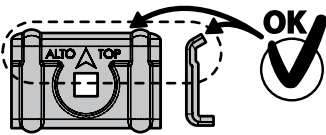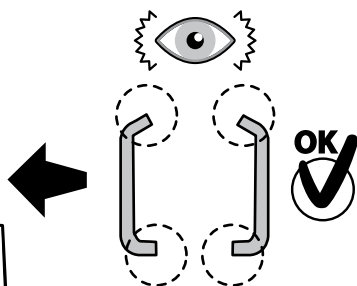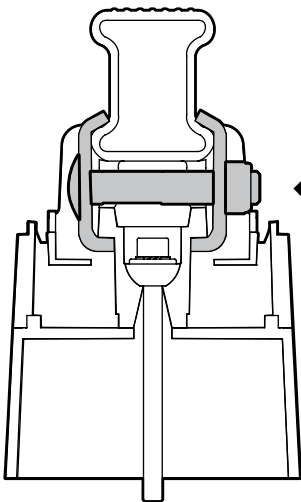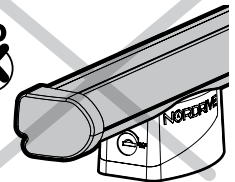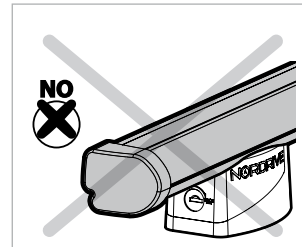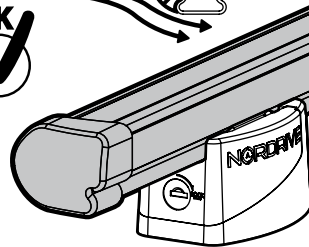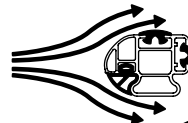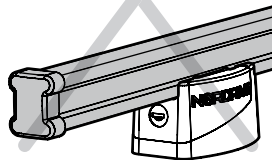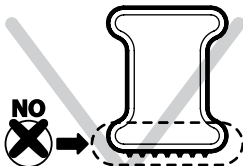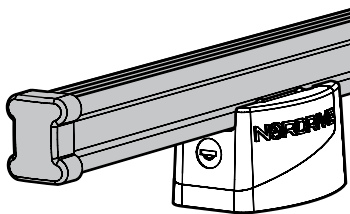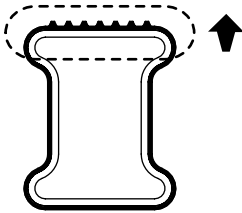


5

A

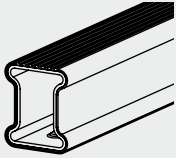

Kargo



ACCIAIO
Steel


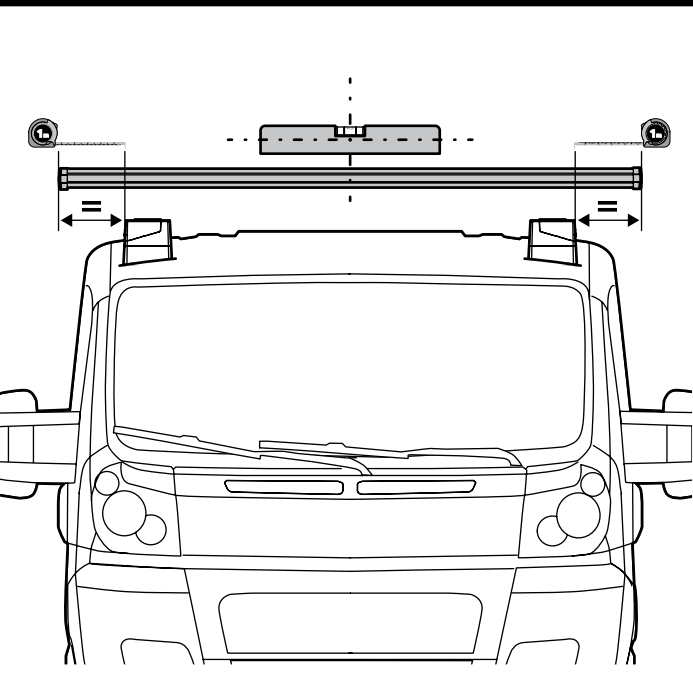



Diagram showing the Kargo steel bar being installed on a vehicle roof. The bar is positioned across the roof rails, and the diagram indicates the correct placement and alignment.

B



Kargo-Plus

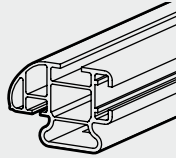

ALLUMINIO
Aluminium

①

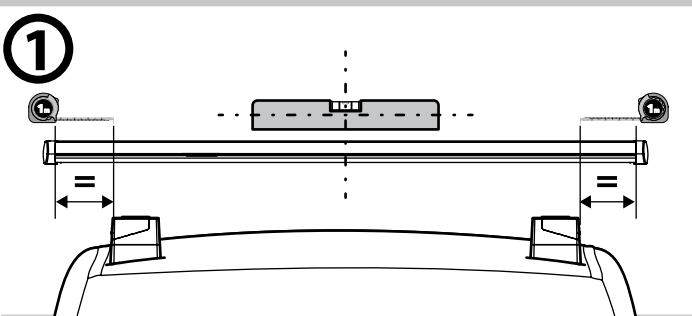


Diagram showing the Kargo-Plus aluminium bar being installed on a vehicle roof. The bar is positioned across the roof rails, and the diagram indicates the correct placement and alignment.

②

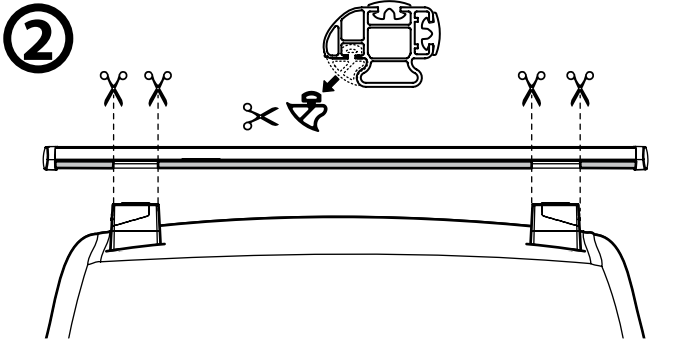


Diagram showing the Kargo-Plus aluminium bar being installed on a vehicle roof. The diagram indicates the correct placement and alignment, with arrows pointing to the specific points where the bar is secured to the roof rails.

6

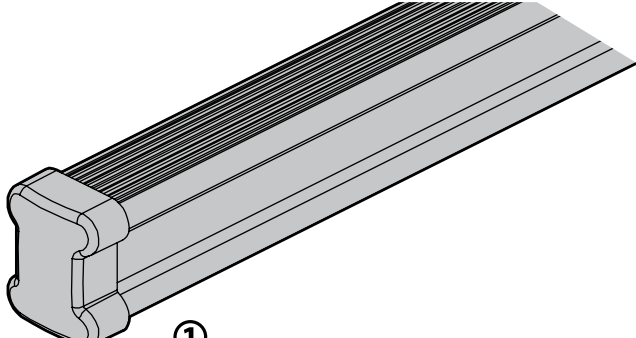


Diagram showing the Kargo-Plus aluminium bar being installed on a vehicle roof. The diagram indicates the correct placement and alignment, with arrows pointing to the specific points where the bar is secured to the roof rails.

②

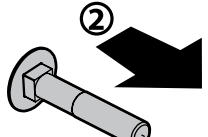


Diagram showing the Kargo-Plus aluminium bar being installed on a vehicle roof. The diagram indicates the correct placement and alignment, with arrows pointing to the specific points where the bar is secured to the roof rails.

①

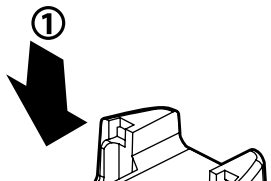


Diagram showing the Kargo-Plus aluminium bar being installed on a vehicle roof. The diagram indicates the correct placement and alignment, with arrows pointing to the specific points where the bar is secured to the roof rails.

③

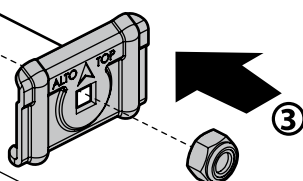


Diagram showing the Kargo-Plus aluminium bar being installed on a vehicle roof. The diagram indicates the correct placement and alignment, with arrows pointing to the specific points where the bar is secured to the roof rails.

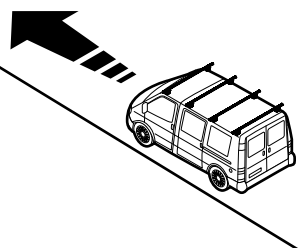


Diagram showing the Kargo-Plus aluminium bar being installed on a vehicle roof. The diagram indicates the correct placement and alignment, with arrows pointing to the specific points where the bar is secured to the roof rails.



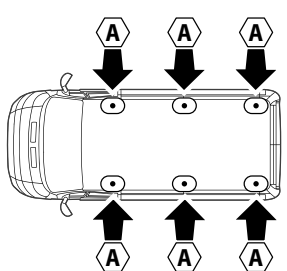


Diagram showing the Kargo-Plus aluminium bar being installed on a vehicle roof. The diagram indicates the correct placement and alignment, with arrows pointing to the specific points where the bar is secured to the roof rails.

7

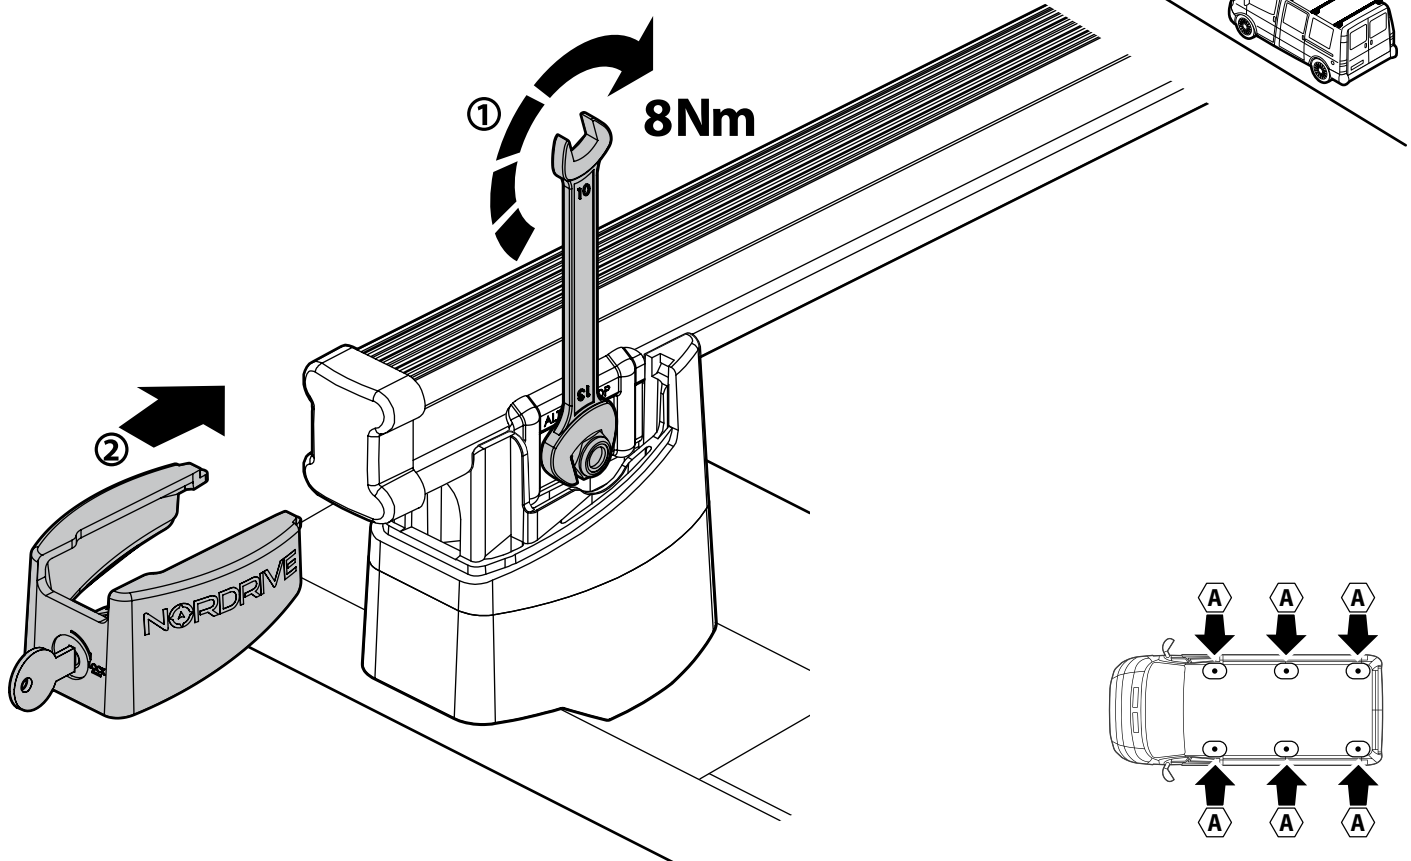


8

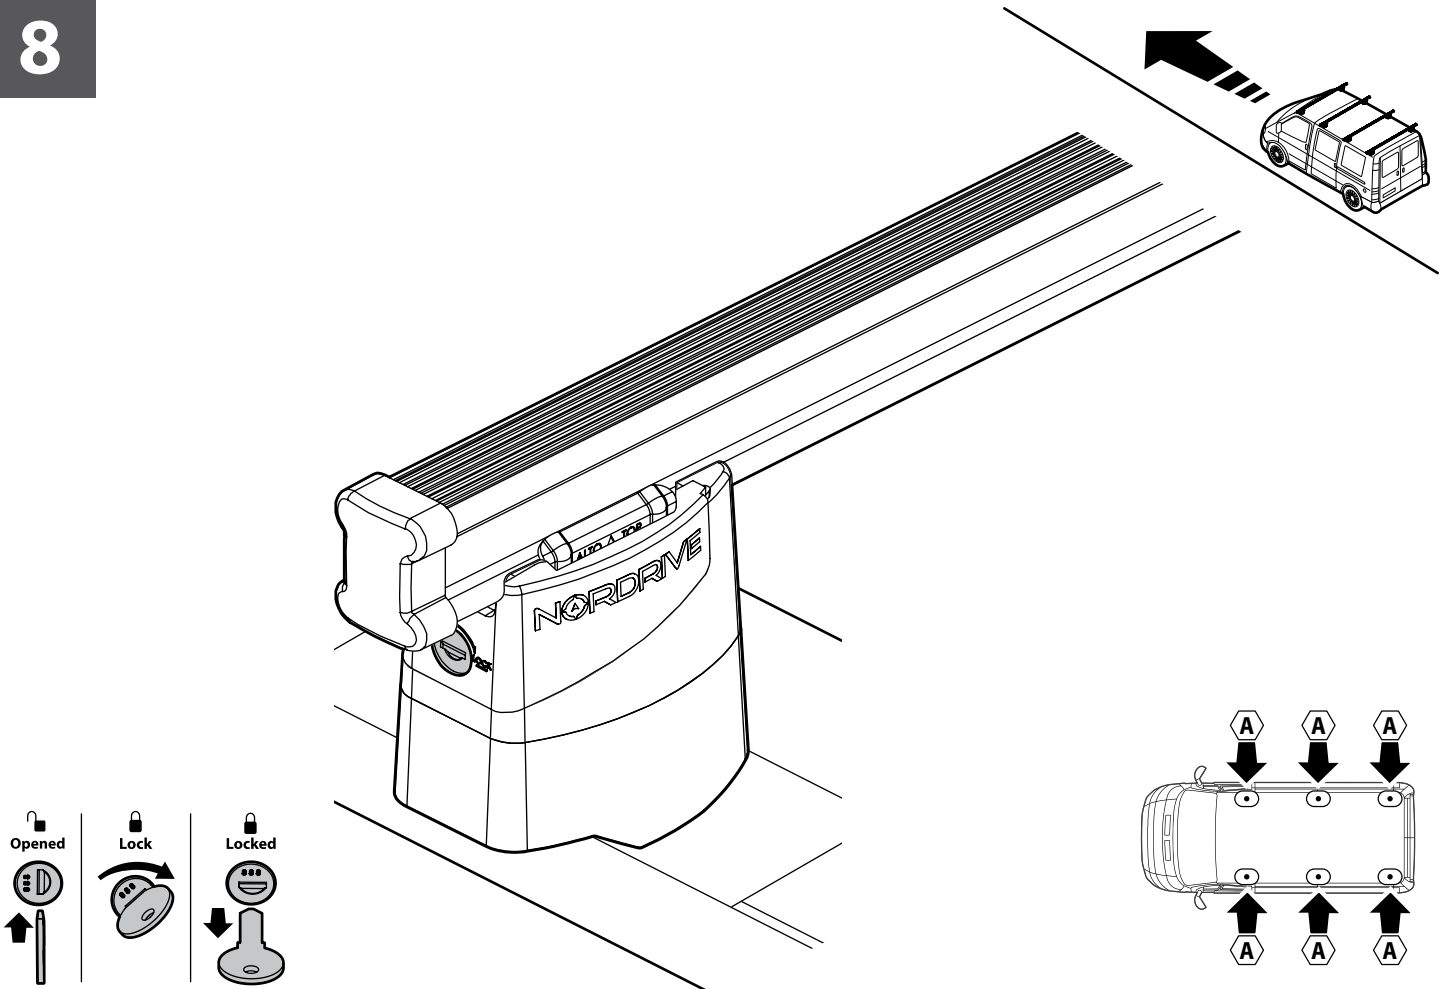

Kargo series




Acciaio / Steel

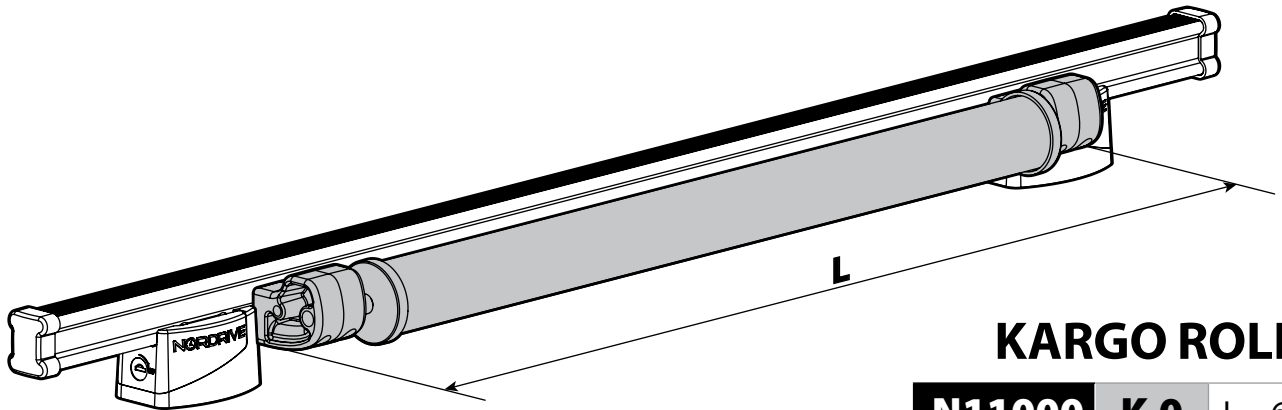


KARGO ROLLER

N11000	K-0	L = 64 cm
N11003	K-7	L = 96 cm

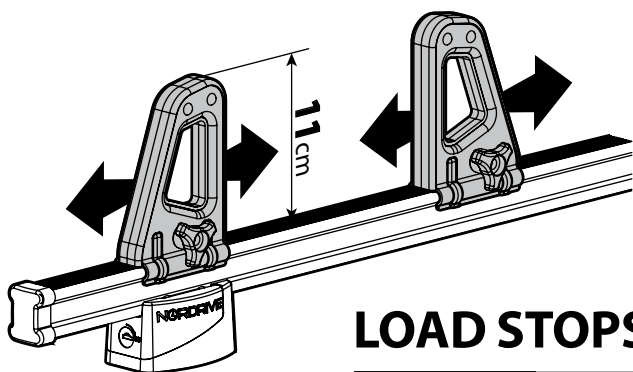


LOAD STOPS

N11001 K-1

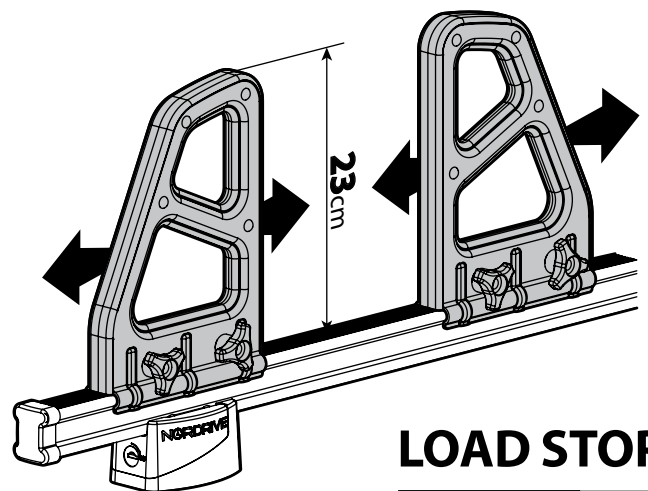

LOAD STOPS

N11002 K-2

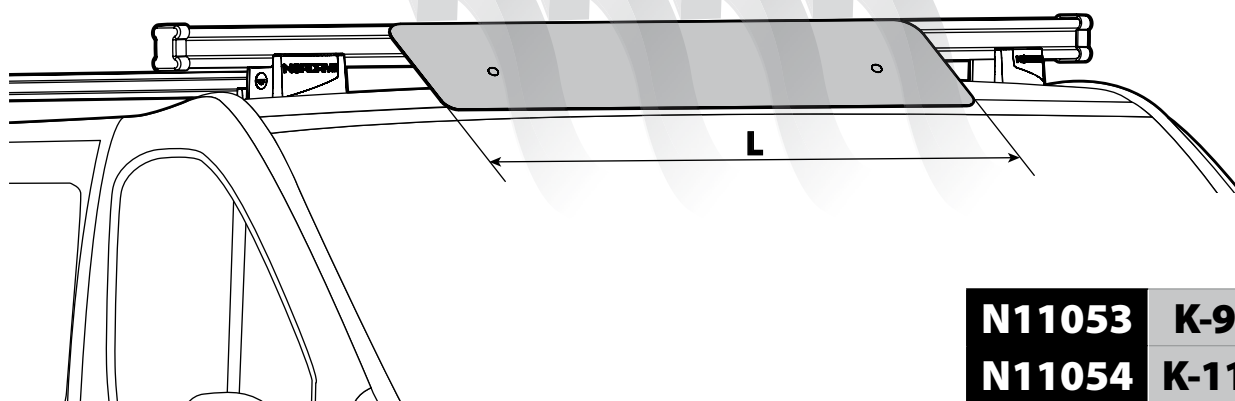


SPOILER


N11053	K-9	L = 95 cm
N11054	K-11	L = 110 cm

OPTIONALS PER / FOR / FÜR:

Kargo-Plus series

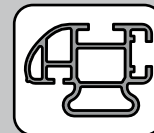



Alluminio / Aluminium

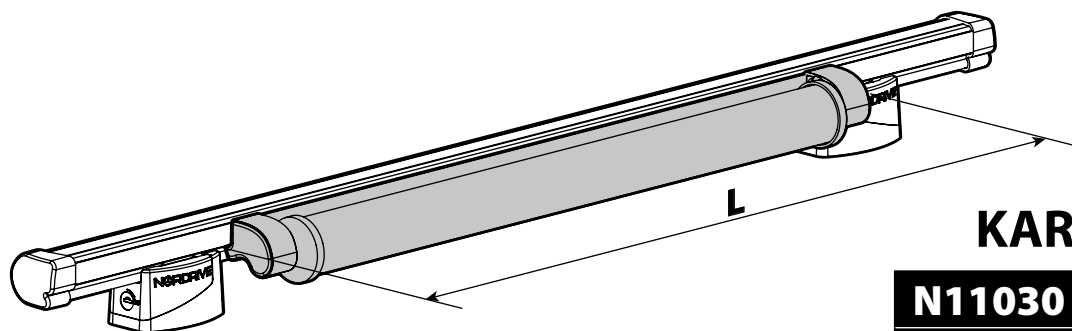

KARGO ROLLER


N11030 KP-0 L = 64 cm

N11034 KP-7 L = 96 cm

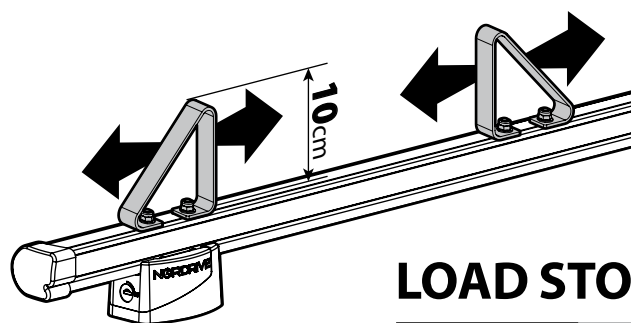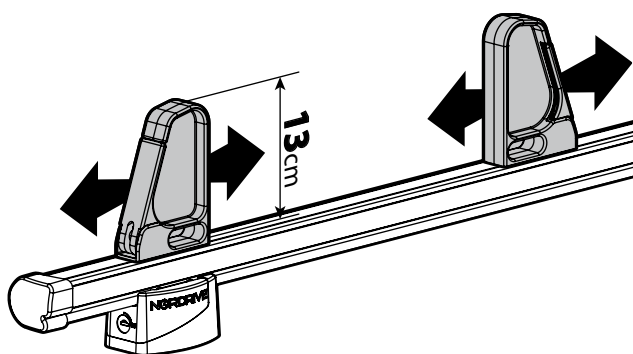


LOAD STOPS

N11031 KP-1

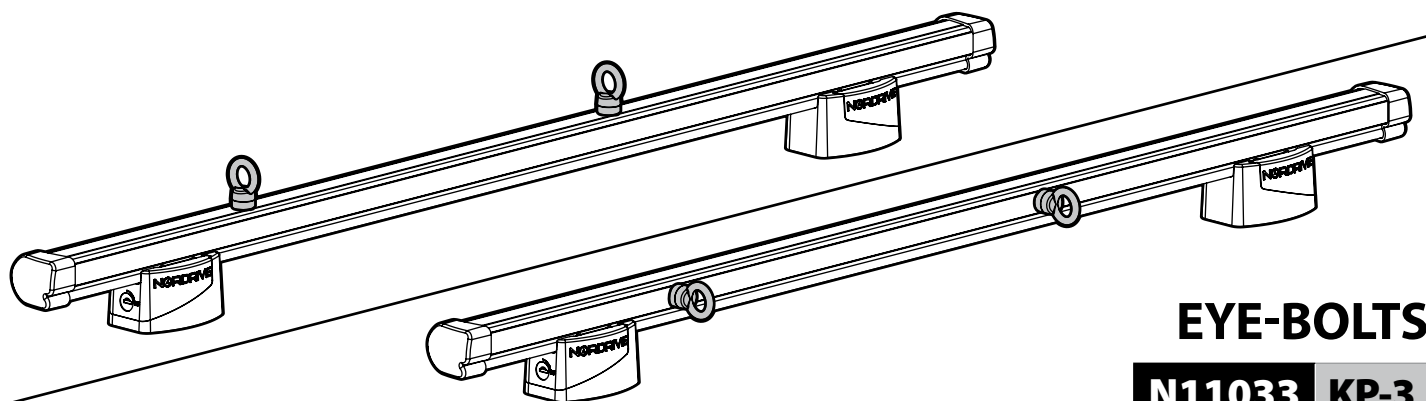

EYE-BOLTS

N11033 KP-3

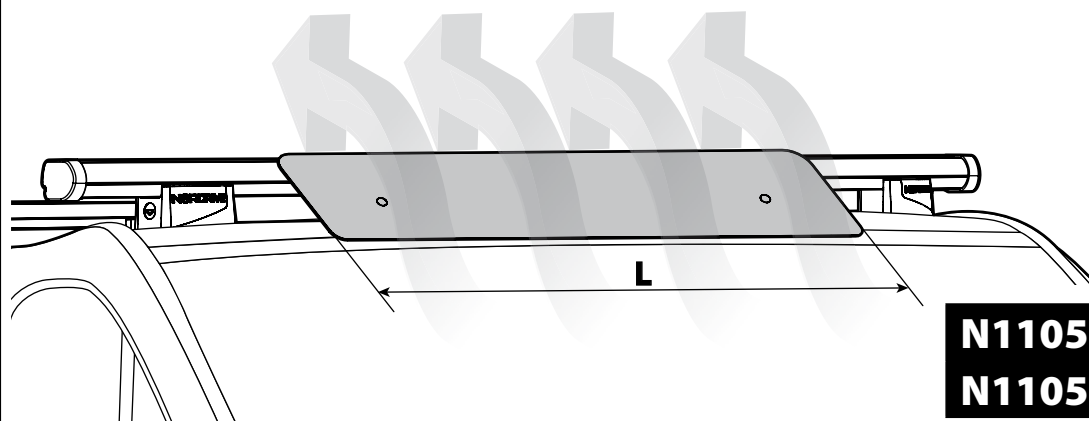

SPOILER

N11057 KP-9 L = 95 cm

N11058 KP-11 L = 110 cm


OPTIONALS PER / FOR / FÜR:

Kargo series



Acciaio / Steel


Kargo-Plus
series

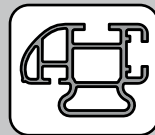

Alluminio / Aluminium



KARGO-TUBE

N11050	T200	L = 205 cm
N11051	T300	L = 305 cm
N11052	T400	L = 405 cm

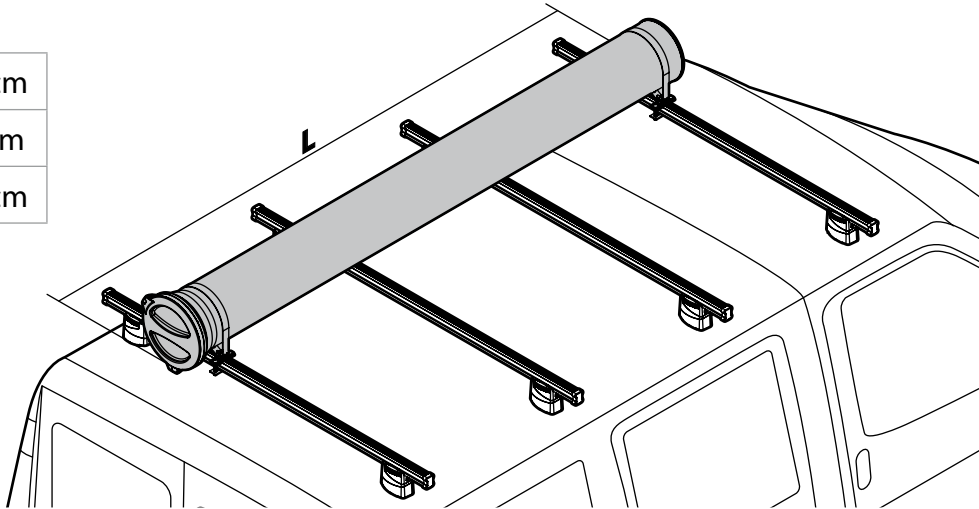


LADDER HOLDER STRAPS

N11065 U-5

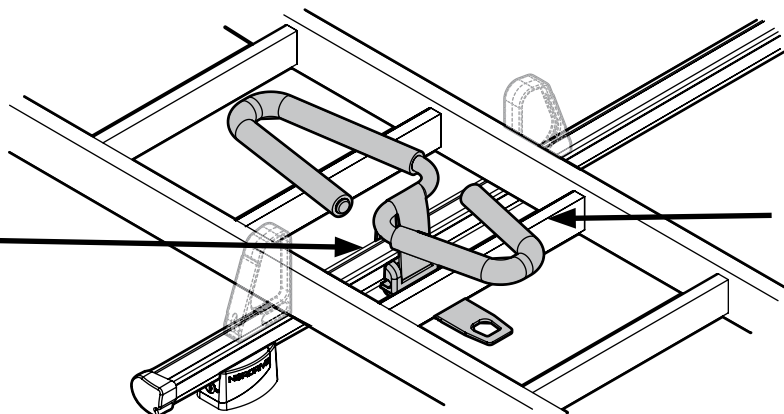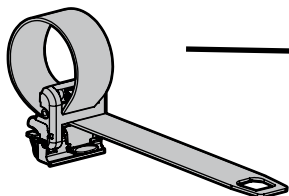


LADDER STEP ADAPTER

N11067 U-6

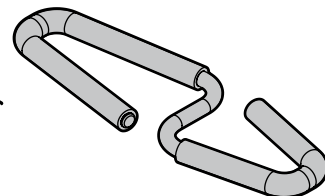

EXTENSION ROLLER

N11020	U-0	L = 64 cm
N11021	U-7	L = 96 cm

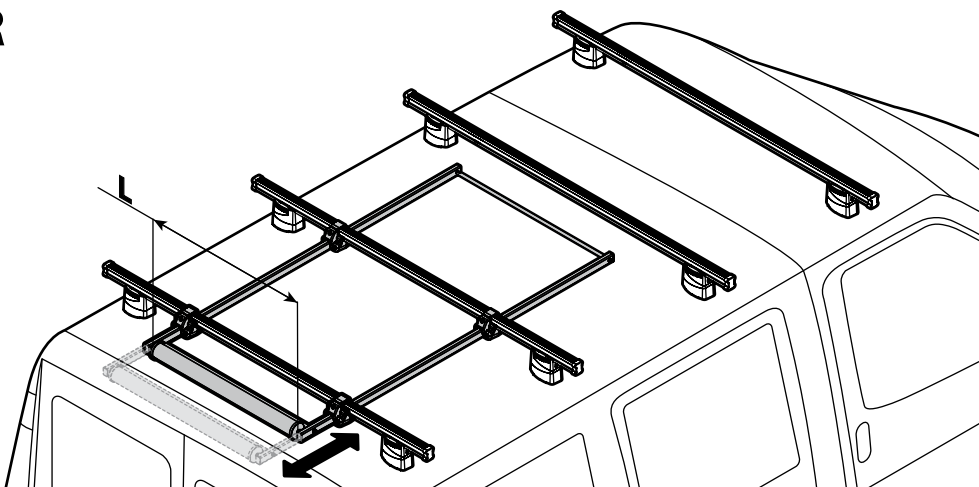

- (I) Lotto di produzione da comunicare per eventuali ricambi
- (GB) Production lot number to be communicated for any spare parts
- (F) Lot de production à communiquer pour toute pièce de rechange
- (D) Produktionscharge für eventuelle Ersatzteile
- (E) Lote de producción a comunicar por cualquier repuesto

Lot.

NORDRIVE®
TRANSPORT SOLUTIONS

NORDRIVE® is a registered trademark of
LAMPA S.p.A.
Via G. Rossa 53/55, 46019 Viadana (MN) ITALY
Tel. +39 0375 820700
UNI EN ISO 9001:2008 Certified Company
www.nordrive.it
www.lampa.it